

PCM-23U1DG-CE

USB Slot /w Lock for USB Dongle

Startup Manual

Packing List

Before installation, please make sure that you have:


- 1 x USB dongle I/O Plate with wired cable
- 1 x Startup manual
- 1 x Warranty card
- 1 x USB dongle half-size mPCIe (PCM-23U1DG-CE)
- 1 x Full/Half-size mPCIe adapter kit (PCM-23U1DG-CE)

If any of the above items are missing or damaged, please contact your distributor or sales representative immediately.

Installation


Please follow the steps as below.

1. Assemble half-size mini-PCIe card and bracket with screws.

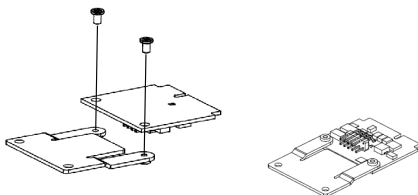


Installation (Cont.)

2. Install USB device into PCM Module.

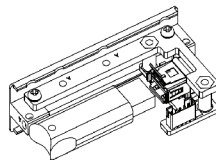

3. Insert the PCM Module through the blanking plate hole and secure the screws. Attach the PCM Module to the mini-PCIe card with the cable.

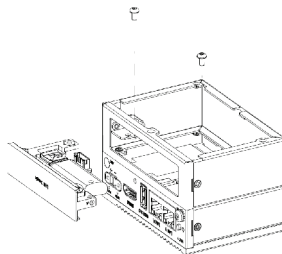

Documentation/Software Support Guide

The support documentation and drivers can be accessed from Advantech website.

- Documentation
- Datasheet

For more information on this and other Advantech products, please visit our website at:

<https://www.advantech.com/>



For technical support and service:

https://support.advantech.com/support/new_default.aspx

This startup manual is for PCM-23U1DG-CE.


Part No. 204323U100

Edition 1
April 2019

PIN Assignment

The following tables and figures show the pin assignments of the connector on the I/O module.

Description of PIN Use - On I/O Plate			
CN1, USB w/locked		CN2, Internal cable for USB	
PIN1	+5V	PIN1	+5V
PIN1	D-	PIN1	D-
PIN3	D+	PIN3	D+
PIN4	GND	PIN4	GND
		PIN5	GND_IO

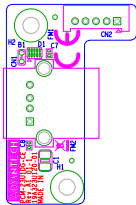

PIN Assignment (Cont.)

Description of PIN Use - On mPCIe Card			
CN1, Internal Cable for USB			
PIN1	+5V	PIN2	+5V
PIN3	NC	PIN1	USB-
PIN5	NC	PIN3	USB+
PIN7	GND	PIN4	GND
PIN9	NC		

